

















Radio Catalog for the radio manufacturer Philips; India

Model	Year	Category	Tubes	Pictures
Asia '72 Pocket Set 15RL035 /00R	1972	Radio	5 - BF194	5 
Automatic Recorder N2218 /72	1976 ??	R-Player		7 
B3CA66U /02	1960 ??	Radio	6 - UCH81	6 
B5CA67U /01	1959 ?	Radio		1 
Bahadur Deluxe II 15RL129 /00B	1973	Radio	6 - BF194	4 
Battery Eliminator NP 1931	1970	Power-S	2 - AC128	2 
Battery Eliminator (Power supply) 15ER3002 /00	1973	Power-S	1 - AC188	11 
BCA116U	1955	Radio	5 - UCH42	1 
BCA355U	1956	Radio	6 - UCH42	1 
BCA405A	1952 ?	Radio	5 - ECH42	8 
BCA495U	1952 ??	Radio		9 
BCA628A	1952	Radio	7 - EF41	9 
BCA628U	1952	Radio	7 - UF41	4 
BCA645A	1955	Radio	7 - EF41	1 
Commander 15RL412 /00R	1972 ?	Radio	7 - BF194	1 
Commander 15RL478 /00B	1967	Radio		5 
D1066 /00	1983 ??	Radio	6 - ED1502	11 
Gramophone (Mains-Battery Portable Music System) 15GF533 /00	1973	R-Player	6 - BC148B	1 
Gramophone - Stereo System 15GF832 /06 /06S	1972	R-Player	10 - BC158	1 
International AC B4CA65A	1958	Radio	6 - ECH81	1 
International AC B4CA67A	1959	Radio	6 - ECH81	8 
International AC B4CA67A /01	1959	Radio	6 - ECH81	1 
International AC BCA435A	1956	Radio	6 - ECH81	1 
International AC BCA436A	1955/56	Radio	6 - ECH81	19 
International AC BCA436A /01	1955/56	Radio	6 - ECH81	1 
International AC BCA456A	1956	Radio	6 - ECH81	1 
International AC/DC B4CA65U	1958/59	Radio	6 - UCH81	4 
International AC/DC B4CA67U	1959/59	Radio	6 - UCH81	1 
International AC/DC B4CA67U /01	1959/59	Radio	6 - UCH81	1 
International AC/DC B4CA98U	1961	Radio	6 - UCH81	3 

International AC/DC BCA435U	1956	Radio	6 - UCH81	7	
International AC/DC BCA436U	1955	Radio	6 - UCH81	1	
International AC/DC BCA456U	1956	Radio	6 - UCH81	1	
Maestro B6CA37A	1964	Radio	7 - ECH81	7	
Maestro B6CA37A /01	1964	Radio	7 - ECH81	1	
Maestro B6CA57A /01	1967	Radio	7 - ECH81	9	
Maestro B6CA65A	1957	Radio	8 - EF89	1	
Maestro B6CA67A	1959	Radio	7 - EF89	5	
Maestro B6CA77A	1959/60	Radio	7 - EF89	7	
Maestro BCA645U	1955	Radio	7 - UF41	2	
Maestro BCA655A	1956	Radio	7 - EF41	6	
Maestro BCA655U	1956/57	Radio	7 - UF41	1	
Maestro BCA656U	1956/57	Radio	7 - UF41	1	
Maestro 2 15RB698	1972 ?	Radio	6 - ECH81	4	
Maestro Bi-Ampi B6CA97A	1961	Radio	8 - EF89	11	
Maestro II 15RB677 /01S	1967-69	Radio	7 - ECH81	4	
Maestro II 15RB697	1969	Radio	7 - ECH81	4	
Maestro Novosonic Bi-Ampli B6CA97A /02	1961 ?	Radio	8 - EF89	5	
Major B5CA17A /01	1964	Radio	6 - ECH81	1	
Major B5CA37A	1964	Radio	6 - ECH81	5	
Major B5CA47A	1966	Radio	6 - ECH81	1	
Major 15RB506 /00	1971	Radio	8 - BF194	4	
Major 15RB536 /00	1974	Radio	8	6	
Major 15RB587 /01S	1968	Radio	6 - ECH81	5	
Major Novosonic B5CA86A	1960	Radio	7 - ECH81	1	
Major Novosonic B5CA97A	1962	Radio	7 - ECH81	7	
Major Novosonic AC B5CA66A	1958	Radio	6 - ECH81	1	
Major Novosonic AC B5CA67A	1959	Radio	6 - ECH81	4	
Major Novosonic AC/DC B5CA67U	1959	Radio	6 - UCH81	4	
Major with IC 15AB684 /01Z	1977/78 ?	Radio		4	
Minor B4CA07A	1961	Radio	6 - ECH81	1	
Minor B4CA17A	1962	Radio	6 - ECH81	5	
Minor B4CA27A	1963	Radio	6 - ECH81	5	
Minor B4CA37A	1964	Radio	6 - ECH81	1	

Novosonic B3CA07B	1960 ?	Radio	4 - DK92	6	
Philetta BCA335U	1955	Radio	6 - UCH42	1	
Philetta BCA345U	1955/56	Radio	6 - UCH42	1	
Philetta 15AL265 /00B /01B	1970 ??	Radio	6 - BF194	4	
Philetta 15RL312 /00R	1972	Radio	6 - BF194	8	
Philetta Deluxe B3CA17U	1963	Radio	5 - UCH81	4	
Philetta Deluxe B3CA17U /02	1964	Radio	5 - UCH81	1	
Philetta Super B3CA47U	1965	Radio	5 - UCH81	1	
Philettina B2CA66U	1957/58	Radio	5 - UCH42	1	
Philettina B2CA67U	1957/58	Radio	5 - UCH42	1	
Philettina B2CA99U	1961	Radio	4 - UCH81	1	
Philettina BCA236U	1956	Radio	5 - UCH42	8	
Philettina 15RL211 /00X /00B	1972 ?	Radio	6 - BF194		
Philettina Deluxe 15RL221 /00B /01B	1973	Radio	6 - BF194	1	
PM2412 A2	1970 ?	Equipment		1	
PM3206 /00 [new]	1984	Equipment		7	
Portable Radio D1036 /30	1980 ??	Radio		3	
Prestige 15RB505 /00Z	1969	Radio	5 - ECH81	4	
Prestige 15RB525 /00Z /11Z	1972/73	Radio	5 - ECH81		
Pride 15RB327 /00B	1972	Radio	6		
Prince deluxe 4 Transmains RL346 15RL346 /01R	1974	Radio	7 - BF194	15	
Prince de Luxe II 15RL311 /00B /00S	1971	Radio	6 - BF194	8	
Skipper 15RL517 /00B	1971	Radio	8 - BF194	6	
Skipper FM Transmains 15RL558 /00R	1975 ??	Radio	10 - BF194	8	
Skipper Transmains 15RL518 /00B	1973	Radio	9 - BF194	7	
Stereo 15RB709 /00S	1970 ?	Radio	8 - ECH81	4	
Stereo Philips Sound	2010 ??	Radio		3	
Stereo Radio 15RB708 /00S	1970	Radio	8 - ECH81	14	
SurKiran RL205 /00	1975 ??	Radio		4	
Transistor Ace 15RC509 /00 /01S	1970/71	Radio	8 - BF194	5	
Valiant 15RB477	1967	Radio	6 - ECH81	1	
Valiant 15RB487	1968	Radio	6 - ECH81	5	
Valiant II 15RB427	1972	Radio	5 - ECH81	6	
Valiant II 15RB497	1969	Radio	5 - ECH81	6	

Viking 230 15AL230 /00R	1970 ??	Radio	6	3	
15DR481 /00B	1985 ??	Radio		3	
90RL215 /01R	1974 ?	Radio	8 - BF195	11	